

The operation of 8/16CH DVR – CDRW Backup 1.0

➤ Use CD-R for backup




Warning

Before backup, please insert the Disk during DVR “Live mode”
Never insert the Disk during DVR “Set up mode”.




Attention

Please use the clean Disk. If the Disk has some data, please format the Disk by PC first(use CDRW disc).

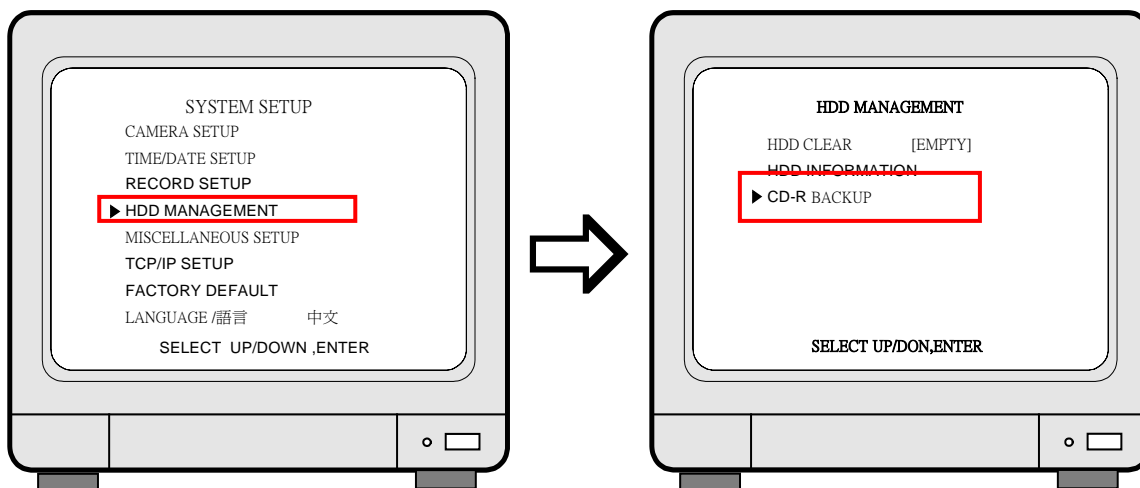

Enter DVR System Setup ▶ HDD Management ▶ CD-R Backup

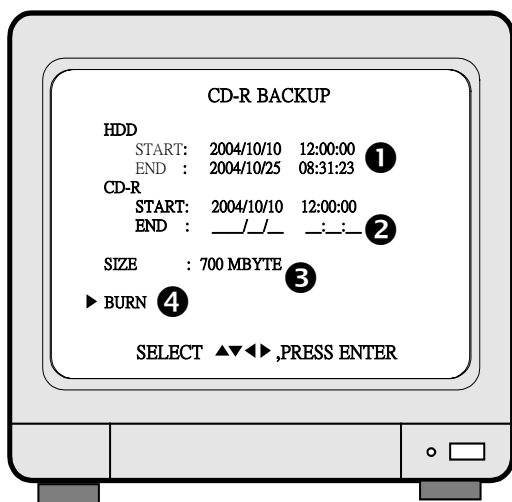

- ① Record start time / end time for HDD
- ② Backup start time/end time for CD-R
- ③ SIZE
- ④ BURN

- [Record start time / end time]

To indicate the start/end recording date and time of current HDD information

- [Backup start time /end time]

To select the start/end recording date and time for backup

- [SIZE]

To set the capacity of CD-R for backup by using ◀▶ to adjust the size. Then select [ENTER] and DVR will indicate start/end recording date and time for backup automatically.

● [BURN]

According to the setup as above, DVR will start burning the backup image to CD-R and display the burning percentage on screen.

System will save the file as **AJP** format. User has to install the program of AJP Player for playback the backup file.

➤ **Procedure of burning**

1. Insert the CD-R to burner under DVR “Live Display” mode.
2. Enter DVR System Setup ➤ HDD Management ➤ CD-R Backup
3. Select the start/end recording date and time for backup
4. By using ◀▶ to adjust set the capacity of CD-R for backup then select [ENTER]
5. Select [**BACKUP**] to start burning the backup image to CD-R




Attention

Please confirm the capacity of CD-R before setting the capacity of CD-R for backup. Do not set the exceeding volume than the disc capacity.


➤ **Installation of AJP PLAYER**



1. Insert software CD
2. Go to MENU to select [**Install AJP player**] then start the installation

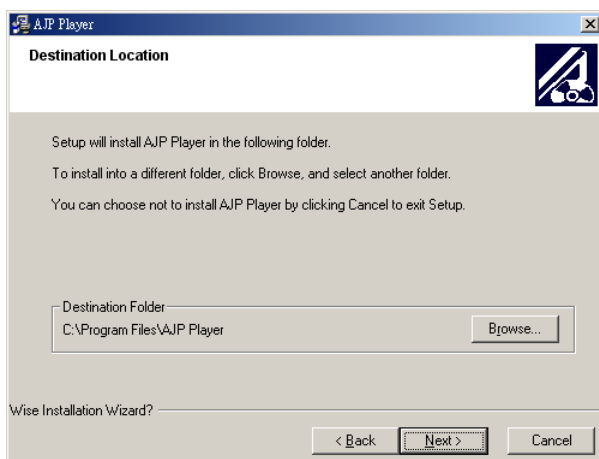


4. Select the Destination Folder

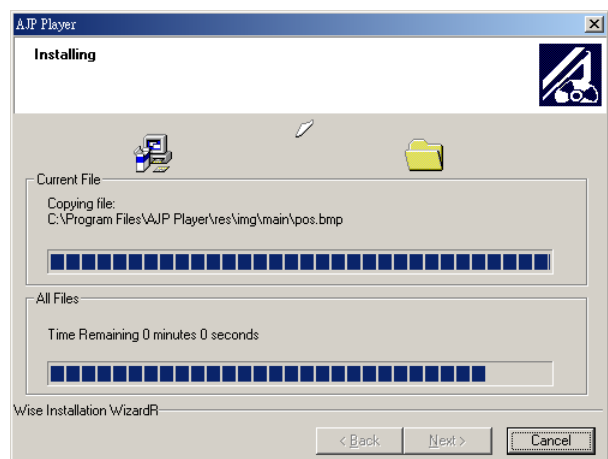

3. Copy file to the Destination Folder. System will build a new icon of [**AJP PLAYER**] on PC [**DESKTOP**] Execute the AJP program directly from Desktop

➤ **Software interface of AJP PLAYER**

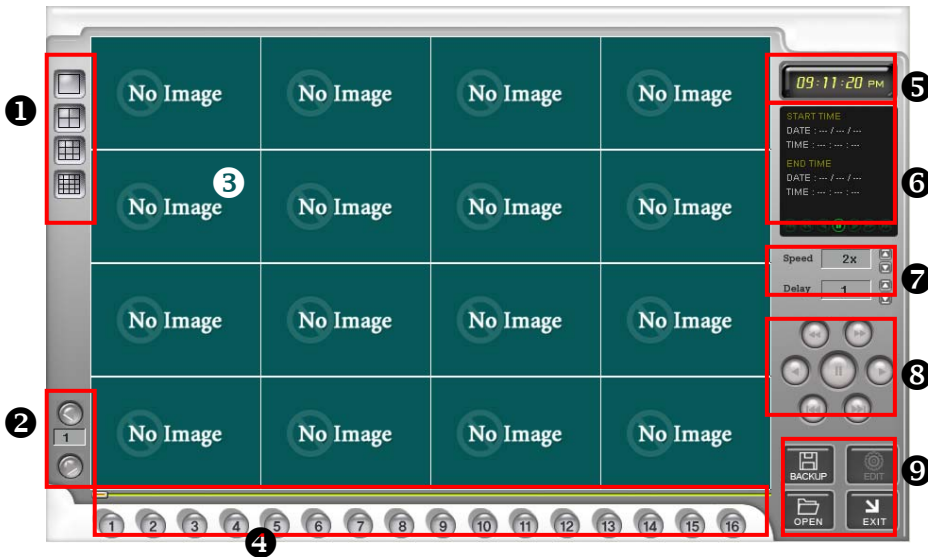

① : Selection of [1 / 4 / 9 / 16] Multi-Screen.

② : Switch to last selection of multi-screen: Switch to next selection of multi-screen


③ Display screen: To display the backup image

④ Channel selection: To select each single channel CH1~CH16

⑤ Time display: To indicate the current time

⑥ Information window: To indicate the backup start/end recording date and time and playback time

⑦ Speed Adjustment:

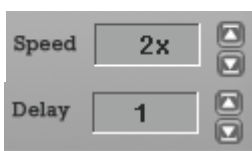


Speed: To expedite the speed of playback (2X , 4X , 8X ,16X , 32X , 64X)

The same application on Fast Rewind or Fast Forward

Delay: To slow down the speed of playback (1/2X , 1/4 , 1/8X , 1/16X)

The same application on Rewind or Forward

⑧ Function button of playback:

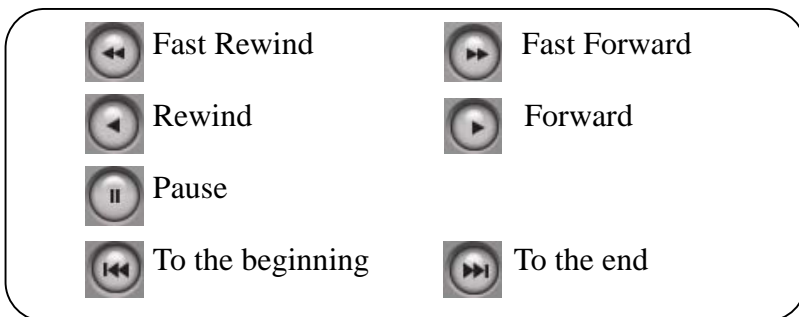

⑨ Function button:



BACKUP: To save single picture as JPG file




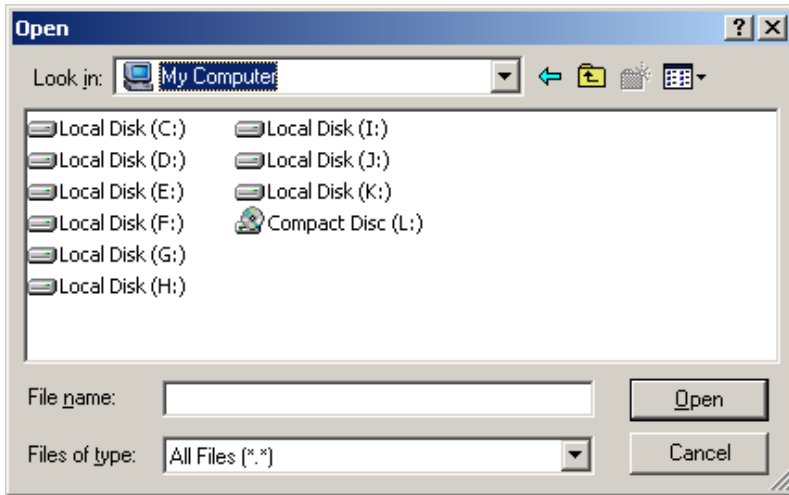
OPEN: To open the DVR backup file



EXIT: To exit the program

➤ **Open AJP file**


1. Select  (OPEN) then see file window



2. Select the file location then click **[OPEN]** to open the backup file

➤ **Save JPG file**

1. During playback the backup image ,click  directly to save the single image as JPEG file.

2. During playback the backup image, press “PAUSE” then click  to save the single image as JPEG file.



Attention

System will save JPG file to the default destination folder.

System will give the file name as:

EX: 16_20041028_185423 (**DVR CH_YYMMDD_TIME**)