



Quick Help Guide for Standard Security System Functions for customers with Honeywell, GE, and DSC Systems. If you cannot fix your system issue with the Quick Help Guide, then please call ASC at 202-829-7327 to schedule a Service Call.

FUNCTION	Honeywell	GE Concord	GE Simon	DSC 832
ARM	Code + Stay Code + Away	1 + Code	Press either or both “Doors & Windows “Motions”	Code [for Away Code [for Stay]
DISARM	Code + 1 [off]	1 + Code	“Disarm” + Code	Code [Off]
RESET	Code + 1 [off]	1+ Code	“Disarm” + Code	Code [off]
FIND TROUBLE	*	* short Summary * + * full Summary	Status	*+2 + < >
CHIME	Toggle Code + Chime	Toggle 7 + 1	“Chime” Doors “Chime” Motion	Toggle Chime
ZONE BY-PASS	System must be off. Code + Bypass + Zone	Arm System ¹ , then # + Code + Zone	“Bypass” to Zone + Code	Code [Off] < or > to Bypass +1 + < or > to Zone + # to select
UN-BYPASS	Code + 1 or Off	# + Code + Zone	Bypass + Code	Code [Off]

Note 1: If Zone is open, then Arm [with Protest] + #